


## Can-Am Outlander radiator relocation install


Add radiator to radiator kit.



Drill 40-50mm hole for upper radiator hose.

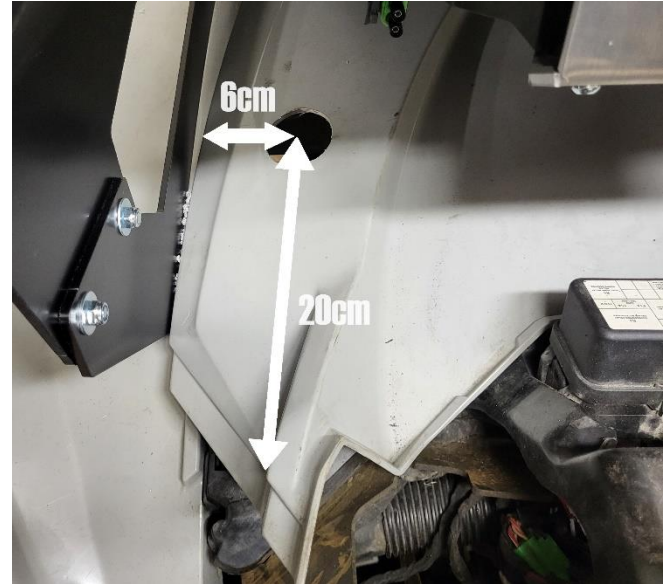


Drill 40-50mm hole for lower radiator hose.

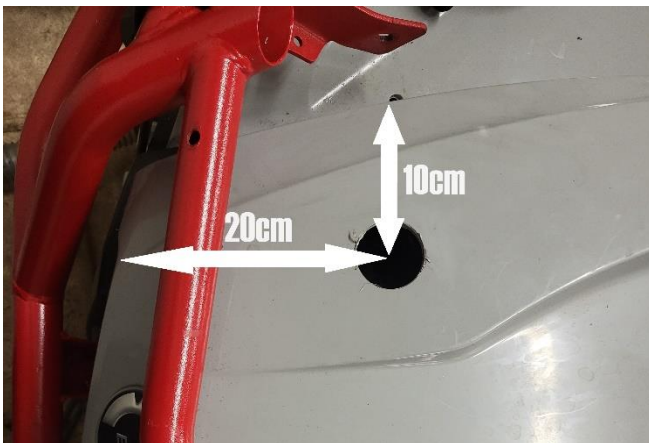

Install hose (25x400) to radiator lower connection.  
This point you can also install radiator and cover.



Connect lower water hose

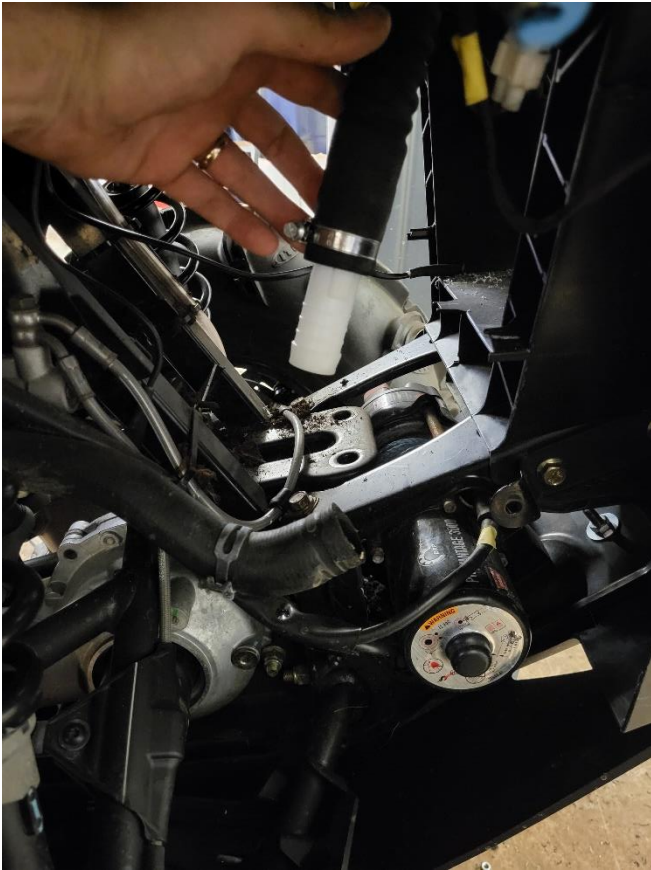


8x20mm bolt



8x20mm bolt




6x35mm bolt

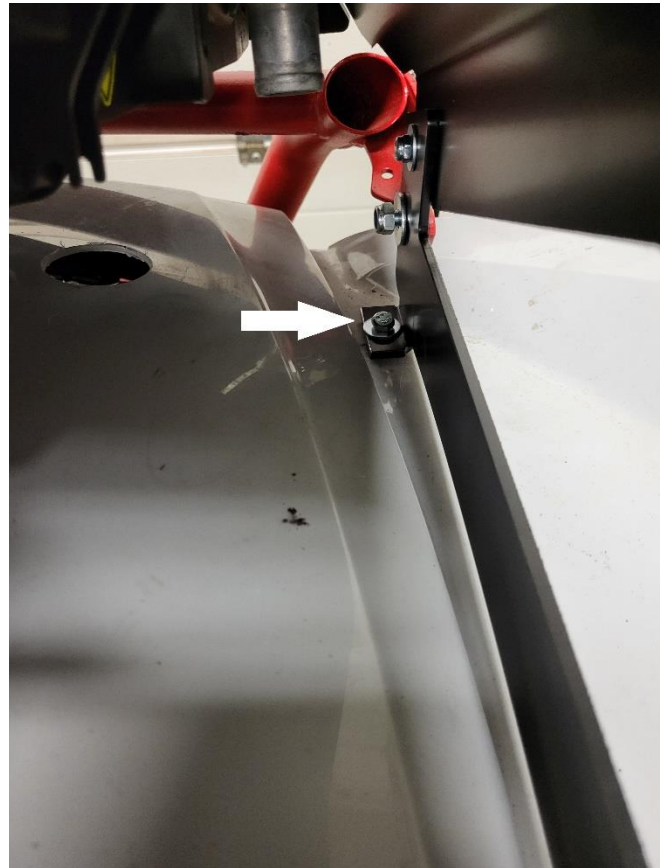



Connect fan wires.

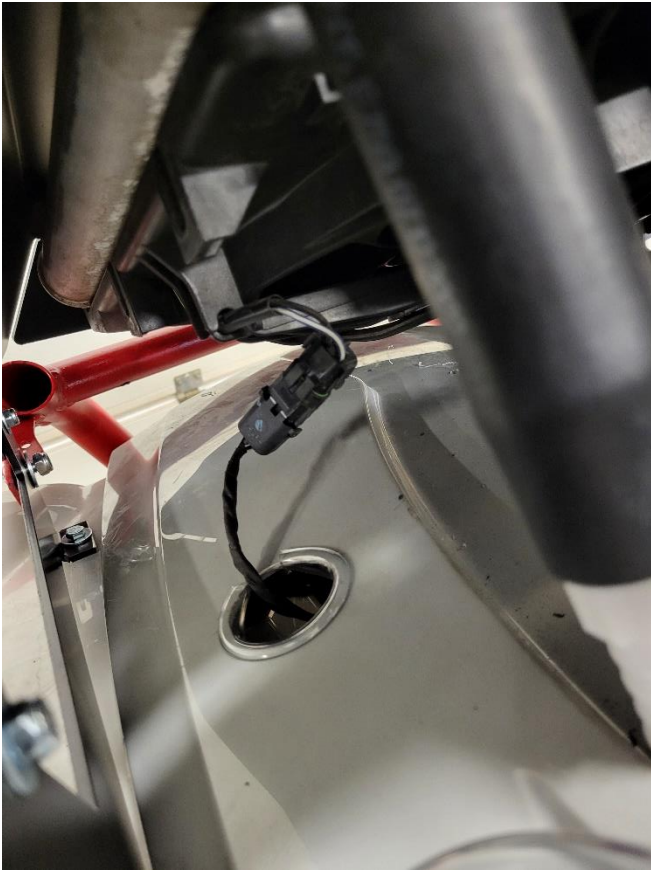

Connect 90 degree plastic hose connector and hose (25x400)



Cut upper hose.



At this point, add coolant liquid.



Now you can connect upper hose to radiator.



Pro tip:

If you have plastic hose, cut one section open.  
This prevents the hose from being rubbed.

